




2-Door RZR 900-S / 1000 Door Inserts

Hardware Pack Contents:

1. Rubber Edge Trim Roll
2. 2-Small Panel Clips
3. 2-Bolts with washers and lock washers
4. 2-Nut Insert Clips
5. 4-Allen Bolts with Nuts, Washers



1. Remove factory torx head bolts from RED ARROWS in picture below.
2. Attach nut insert clip to door frame at YELLOW ARROW, aligning with center hole in insert.
3. Reinstall factory torx bolts to attach insert to door at RED ARROWS. Use the supplied gold bolt and washers to secure insert to nut clip at Yellow Arrow.

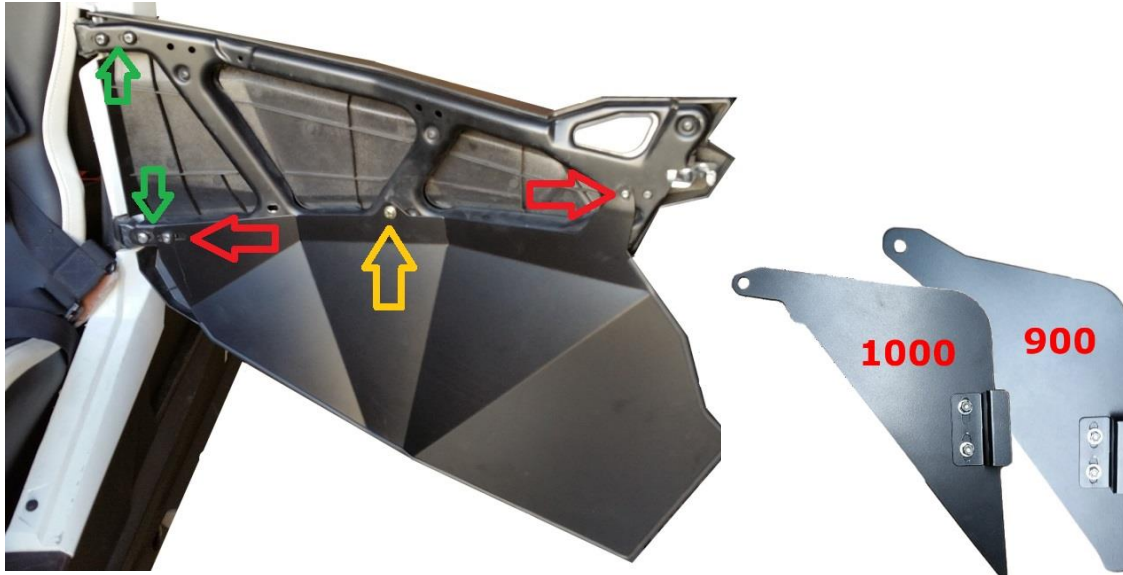

4. Cut to length and install rubber trim to exposed edge of door insert.
5. Attempt to close door slowly. For final adjustment and centering, loosen the 4 torx bolts at GREEN ARROWS to adjust door angle and position.
6. Four small triangular panels are included, identify which two fit your RZR, discard the other two.
7. Attach the Small Panel Clips to small triangles using allen bolts and hardware.
8. Clip small triangular panel in position, remove and reinstall roll cage bolt to secure.
9. Enjoy your new door inserts! THANK YOU!

Any questions/issues please email jake@utvgiant.com